



**Ready** light ON - System is ready for arming.  
**Ready** light OFF - System has an open zone which must be closed or bypassed before arming.

**Armed** light will come ON indicating the system is armed. To arm, ensure "Ready" light is ON - enter 4 digit code.

**Memory** light ON means an alarm has occurred. Press [\*] then [3]. Zone light will come ON to indicate which zone caused the alarm.

**Bypass** light comes ON when you bypass a zone. To bypass a zone, press [\*][1] and then the zone(s) you wish to bypass. Enter 1 for zone 1....6 for zone 6. Press [#] to return to Ready.

**Trouble** light is ON when there is a fault in the system. Press any key to silence the keypad beeping. Press [\*] then [2] to display the trouble type .

Zone Light	Trouble Type
1	..... Low battery
2	..... AC fail (buzzer does not sound)
3	..... Fuse open (BELL or AUX fuse)
4	..... Fail to communicate
5	..... Fire loop(s) trouble
6	..... Clock needs resetting

**Zone** light(s) when ON in the disarmed mode, indicate an open zone. e.g. open door, window, etc. Refer to zone chart on the keypad door for zone information.

Press [**F**] for 2 seconds to activate FIRE transmission.

Press [**A**] for 2 seconds to activate an AUXILIARY transmission.

Press [**P**] for 2 seconds to activate PANIC transmission.

**THESE BUTTONS WILL NOT FUNCTION UNLESS PROGRAMMED BY YOUR INSTALLER.**

Press [**#**].....  
 When an error is made in entering code, then enter code again.  
 To return to ready state after using [\*] commands.